



UpLight Firmware Update Instructions

Released 4.3.2017


Step 1:

Make sure your UpLight is turned off, but still has access to power. Do this by turning off your UpLight from your dashboard.




Step 2:

Tap on the "More" button in the lower right hand corner to open up the pop-up.

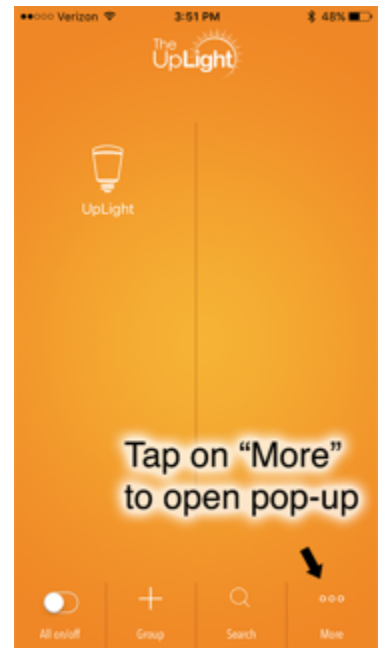

Step 3:

Tap on Update Firmware in the pop up.

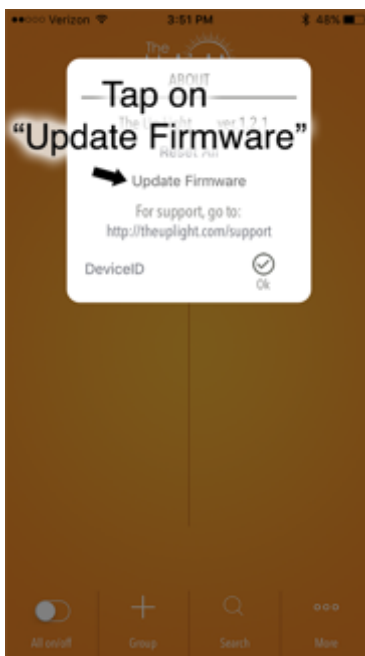


Step 4:

Select "Continue" to start downloading the FW to your phone. Note – you must be connected to the internet and stay within range of your UpLight.




Step 5:

After the FW downloads, click OK.

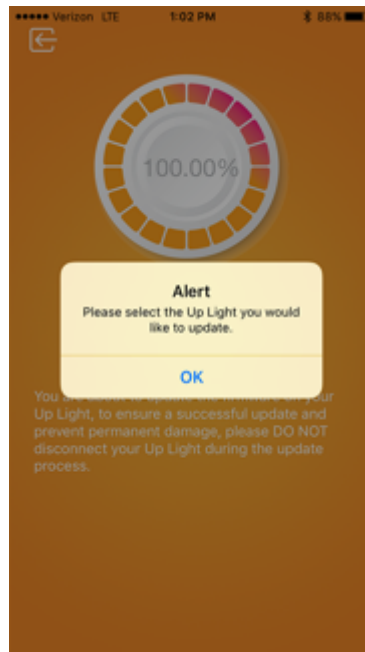

Step 6:

Tap on "Select device to update."

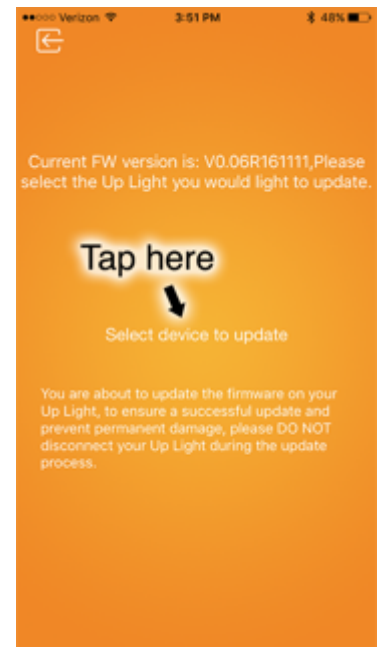


Step 7:

Select the UpLight you would like to update. The name of your UpLight will be on the left, the FW version on the bulb is on the right side. UpLights with old FW versions will show up in RED.



Step 8:

Tap "OK" to continue. The update should take ~3-5 minutes.

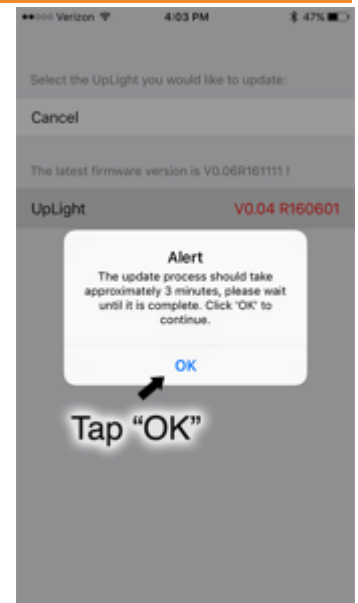

Step 9:


Allow the update process to complete. Make sure the app stays in the foreground until complete.



Step 10:

When the update process is complete, your UpLight should flash and turn on. Tap OK.


If it does not flash, the FW update may have failed. Close the app and reopen, then repeat steps 1-10.

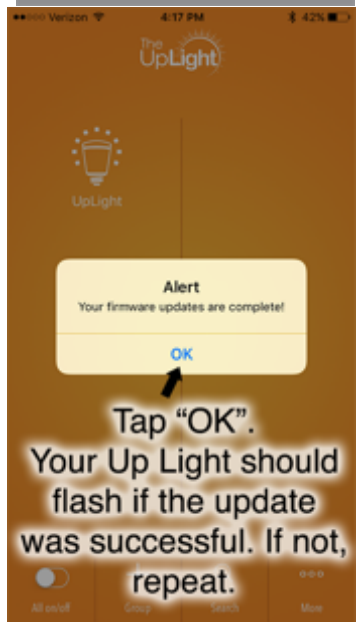

Step 11:

After the FW update process is complete, it is highly recommended that you also perform a Factory Reset.

To Perform a Factory Reset, tap on the “More” Button from the dashboard.

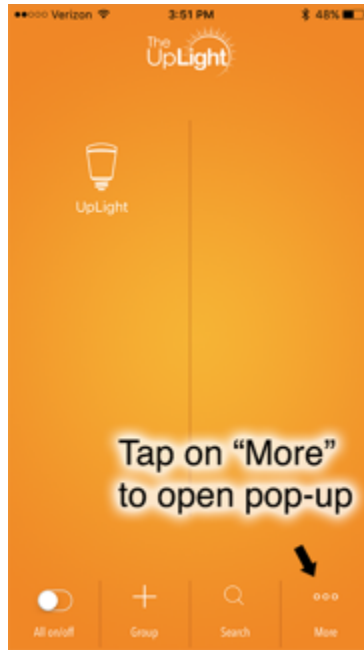

Step 12:

Tap on “Reset All” or “Factory Reset”.

Your UpLight(s) should flash to confirm the reset was successful.

